


## Measuring Instructions

Mount refers to the way the shades will be installed, either Inside or Outside the window opening.

### Inside Mount

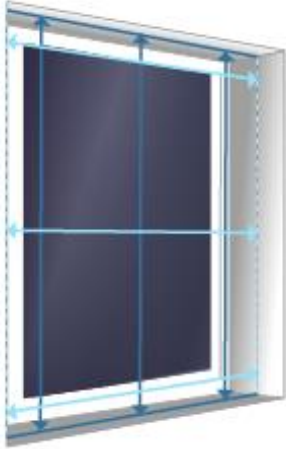


Measure the full width and height of the recess [the size inside the window frame opening] and we will make the appropriate deductions to ensure a perfect fit.

- Measure in 3 places for both the width and the top to bottom, use the smallest measurement
- Don't make any deductions, we'll deduct about 3/8" from the width to ensure your blind fits perfectly
- Please use a metal tape measure, the cloth tape measurers can stretch and give inaccurate measurements

**TIP:** Check that your recess is deep enough to fit the blind into, also bearing in mind any obstructions such as handles.

### Outside Mount

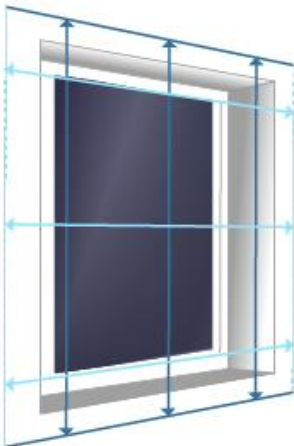

Measure the full width and height of the recess [the exact size you want the blind to be made] and add a little extra to the top and to each side, we will make the blind to the size you specify with no deductions.

- For maximum light coverage and prevent light leakage we recommend that the blind overlaps the window recess by at least 2"-3" at the top and 2"-3" of width to each side of the window (4"-6" total) for maximum light coverage.
- The overlap at the bottom of the blind is a matter of personal choice but please consider obstacles such as furniture or furnaces.

### Part Tiled recesses



If you have tiles part-way up your recess (often the case in kitchens and bathrooms) then the space between them is most likely to be the narrowest point in the recess.

Measure between the tiles to ensure your blind will fit.

**TIP:**

Do the same if you have a picture rail, base boards, or other items on the inside of the recess.